

ASSEMBLING & INSTALLATION INSTRUCTIONS

The drawing shown may not exactly match the product enclosed. However, the installation instructions do apply to this product.

2031 2033 27372 27373

- **♦ WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**
- ♦ ATTENTION! COUPER LE COURANT AU FUSIBLE OU UN DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.1)


- 1. Shut off the power at the circuit breaker and remove old fixture, including the single bar. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
- Attach the mounting screw part way into the side hole of the crook cross bar, then lock it securely with hex nut until becoming. Attach the cross bar to the junction box using two box screws as shown. The side of the cross bar marked "GND" must face out. The junction box is not included.
- 3. Follow wiring instructions carefully (see fig.2).
- 4. Raise the pagoda(G) onto the top coupling of lamp body(C), by turn it clockwise until tight.
- 5. Aligning end of the arm(B) small hole with the backplane's hole, lock it securely with screw(F) and hex nut, attach the other end of the arm(B) hole to the top pipe thread of lamp body(C), lock it securely with the finial(A). Attach the back plate of the lamp body(C) onto the junction box, aligning screws on cross bar with mounting holes and lock it securely with the ball nuts(D). Slip the threadlike bolt of the lamp body at side, open the window. Put the candle sleeve(E) over the lamp holder.
- Install the light bulbs(Not included) in accordance with the fixture's specifications. NOTE: DO NOT EXCEED THE MAXIMUM WATTAGE RATING! Close the window.
- 7. With silicone caulking compound, caulk completely around where back of cover meets with the wall surface to prevent water from seeping into junction box.

CONNECTING THE WIRES (Fig.2)

1. Connect the electrical wires as follows. Connect the Black wire from the fixture to the black house (hot) Wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your junction box has a ground wires (green or bare copper) connect

- fixture's ground wire to it. Otherwise attach the bare copper fixture wire to the green ground screw on the crossbar.
- 2. Tuck the wire connections neatly into the wall junction box.

Your installation is now complete. Return power to the junction box and test the fixture.

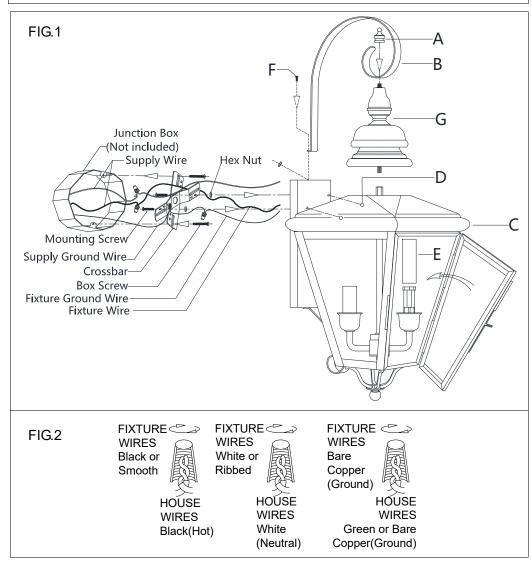

Thank you for purchasing a **LIVEX** product.

Need assistance with parts or assembly? Please call customer service at: 800-761-8056

Or visit us on-line at: WWW.LIVEXLIGHTING.COM